



| Original   | Replacement   | Original   | Replacement  |
|--|---|--|--|
|  Power    |  Power                     |  Menu     |  Menu / Home                  |
|  Mute     |  Mute / Dimmer             |  Exit     |  Exit / Cancel / Clear        |
|  Nicam/A2 |  Shift + Audio / Lang I/II |  1        |  1                            |
|  Sleep    |  Sleep / Timer             |  2        |  2                            |
|  Aspect   |  Shift + Picture / Format  |  3        |  3                            |
|  Media    |  Shift + Display / Media   |  4        |  4                            |
|  Display  |  Display / Media           |  5        |  5                            |
|  Auto     |  Smart / List              |  6        |  6                            |
|  P.Mode   |  Picture / Format          |  7        |  7                            |
|  S.Mode  |  Sound / Title            |  8       |  8                           |
|  DTV    |  D.Menu / Top            |  9      |  9                          |
|  Source |  AV / Input / RDS        |  0      |  0                          |
|  Up     |  Up                      |  -/--   |  Shift + Guide / EPG / -/-- |
|  Left   |  Left                    |  Recall |  Back / Return              |
|  Enter  |  OK                      |  CH+    |  CH+ / Page+                |
|  Right  |  Right                   |  Info   |  Info / Angle               |
|  Down   |  Down                    |  Audio  |  Audio / Lang I/II          |





| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  Vol+          |  Vol+                    |  Stop       |  Stop / Hold                 |
|  CH-           |  CH- / Page-             |  Rec/Repeat |  Rec / Rec Mode              |
|  FAV           |  Fav / Marker / PC       |  Rec/Repeat |  Shift + Green / APP /       |
|  Tv/Radio      |  TV/Radio /              |  T-Shift    |  Eject / Surround            |
|  Vol-          |  Vol-                    |  Red        |  Red / Netflix / Search      |
|  Text          |  Text / Goto             |  Green      |  Green / APP / Repeat        |
|  EPG           |  Guide / EPG / -/--      |  Yellow     |  Yellow / YouTube / Repeat   |
|  Subtitle      |  Subtitle / EQ           |  Cyan       |  Blue / Prime Video / Random |
|  Index         |  Setup / OPT /           |  |   |
|  <</Hold       |  << / Tune-              |  |   |
|  <</Hold      |  Shift + Stop /         |  |   |
|  Size        |  Zoom / Size           |  |   |
|  >>          |  >> / Tune+            |  |   |
|  I<</Reveal  |  I<< / Preset-         |  |   |
|  >>I/Subpage |  >>I / Preset+         |  |   |
|  Play        |  Play / Slow           |  |   |
|  Pause       |  Pause / Step / Freeze |  |   |

