

 
 



 



Original	Replacement	Original	Replacement
Power	Power	Vol+ Tv	Vol+
Power Tv	Shift + Power	Dubbing	Setup / OPT /
DVD	Shift + 2	0	0
HDD	Shift + 7	AV/Input	AV / Input / RDS
Open/Close	Eject / Surround	Vol- Tv	Vol-
Av/Input Tv	Shift + AV / Input / RDS	<< Scan	<< / Tune-
1	1	Scan >>	>> / Tune+
2	2	I<<< Skip	I<<< / Preset-
3	3	Skip >>>	>>> / Preset+
PR/CH+ Tv	Shift + CH+ /	Pause/Step	Pause / Step / Freeze
4	4	Play	Play / Slow
5	5	Stop	Stop / Hold
6	6	Home	Menu / Home
PR/CH- Tv	Shift + CH- /	Up	Up
7	7	PR/CH+	CH+ / Page+
8	8	Menu/List	D.Menu / Top
9	9	Menu/List	Smart / List





Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 PR/CH-	 CH- / Page-
 Return	 Back / Return
 Timeshift	 Info / Angle
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CHP.ADD	 Text / Goto
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 Thumbnail	 Picture / Format
 Zoom	 Zoom / Size
 Marker	 Fav / Marker / PC

Original	Replacement
 Search	 Red / Netflix / Search
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Tv/DVD	 TV/Radio /
 *	 Guide / EPG / -/--

