 







 




 



 

 


















Original	Replacement
 Power	 Power
 Eject	 Exit
 Open / Close	 Eject
 Display / Call	 Info
 Channel +	 Ch +
 Channel -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0
 0 / AV	 AV

Original	Replacement
 Program	 Sleep
 Timer Rec	 Shift + Rec
 Rec / OTR	 Rec
 Marker / Tape	 Vol +
 Jump / Zero	 Shift + Back
 Clock / Counter	 Guide
 Counter Reset	 Pre Ch
 TV / VCR	 TV/R
 VCR	 Smart
 DVD	 Media
 Setup / Menu	 Menu
 DVD Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right / TRK +	 Right
 Left / TRK -	 Left
 Enter / Select	 Ok





Original	Replacement	Original	Replacement
 Title	 List		
 Return	 Back		
 Stop	 Stop		
 Play	 Play		
 Pause / Still	 Pause		
 I<< / Index/Skip -	 I<<		
 << / Search -	 <<		
 >> / Search +	 >>		
 >>I / Skip/Index	 >>I		
 Cancel	 +  Shift + Exit		
 Repeat A-B	 Text		
 Zoom	 +  Shift + Eject		
 Slow	 Vol -		
 Angle	 3D		
 Play Mode	 +  Shift + Play		
 Sub Title	 Subt		
 Audio	 Dual		

