 


 
 

 

 

 
 
 






 

 









 




 
 
 


Original	Replacement
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I/II/Audio	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 -/--/+10	 Guide
 Swap/Prog	 Pre Ch
 Tv Menu	 Menu
 Exit	 Exit
 Goto/Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 Red/D.Setup	 Red
 Green/A-B	 Green





Original	Replacement	Original	Replacement
 Yellow/Angle	 Yellow	 Recorder	 Rec
 Blue/Repeat	 Blue	 TV/Radio	 TV/R
 Subtitle	 Subt		
 Play	 Play		
 Pause/Hold	 Pause		
 Size	 Format		
 D.Disc/Reveal	 List		
 D.Menu/Mix	 D. Menu		
 Zoom/TXT	 Shift + Eject		
 I<</Subpage	 I<<		
 >>I/Lang	 >>I		
 Stop/FAV-	 Stop		
 <</FAV	 <<		
 >>/FAV+	 >>		
 Eject/EPG	 Eject		
 USB/SD	 Smart		
 Still	 Options		

