



 
 


 
 
 

 
 


 

 


 
 


 








 














 




Original	Replacement	Original	Replacement
 POWER	 Power	 TREBLE+	 Ch +
 COAX	 Red	 TREBLE-	 Ch -
 OPTICAL	 Green	 SOUND	 Dual
 AUX	 Yellow	 ON NIGHT	 Right
 AUDIO IN	 Blue	 OFF NIGHT	 Left
 USB	 Media	 AUDIO SYNC+	 >>
 BLUETOOTH	 Smart	 AUDIO SYNC -	 <<
 HDMI ARC	 Options	 DIM	 Subt
 I<	 I<<		
 PLAY	 Play		
 PAUSE	 Pause		
 >I	 >>I		
 BASS+	 Up		
 BASS-	 Down		
 VOL+	 Vol +		
 VOL-	 Vol -		
 MUTE	 Mute		

