


 





 







 

 









 











 



 

 



 




















Original		Replacement		Original		Replacement	
	Power		Power		S. Mode		Dual
	Mute		Mute		Source		AV
	1		1		CH +		Ch +
	2		2		CH -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		OK		Ok
	8		8		CH. Edit		Smart
	9		9		Menu		Menu
	0		0		Aspect		Format
	-/--		Shift + Guide		Sleep		Sleep
	Repeat		Text		Rec		Rec
	Vol +		Vol +		Rec Menu		Shift + Rec
	Vol -		Vol -		Red		Red
	Pic. Mode		Options		Green		Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 CH. Group	 3D		
 TV / Radio	 TV/R		
 I/II Audio	 Shift + Dual		
 Subtitle	 Subt		
 EPG	 Guide		
 Info	 Info		
 Play/Pause / Size	 Play		
 Play/Pause / Size	 Pause		
 Stop / Reveal	 Stop		
 I<< / Text (Page -)	 I<<		
 >>I / Index (Page +)	 >>I		
 << / Subpage (FAV -)	 <<		
 >> / Hold(Fav +)	 >>		

