



Original	Replacement
 Power	 Power
 Eject / Open/Close	 Eject
 DVD	 Media
 VCR	 Shift + Media
 AV / Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 I.Skip	 Guide
 Dubbing	 Pre Ch

Original	Replacement
 TV Power	 Shift + Power
 TV AV/Input	 Shift + AV
 TV PR/CH +	 Ch +
 TV PR/CH -	 Ch -
 TV Vol +	 Vol +
 TV Vol -	 Vol -
 << Backward	 <<
 >> Forward	 >>
 I<< Skip	 I<<
 >>I Skip	 >>I
 Pause / Step	 Pause
 Play	 Play
 Stop	 Stop
 Home	 Smart
 Home	 Menu
 Disc Menu / List	 D. Menu
 Disc Menu / List	 List





Original	Replacement
Up / PR/CH(TRK)	Up
Down /	Down
Right	Right
Left	Left
Enter	Ok
Display	Info
Return	Back
Audio	Dual
Subtitle	Subt
Zoom	Shift + Eject
CHP.ADD	Shift + Ok
Rec	Rec
Rec Mode	Shift + Rec
Title	Text
Thumbnail	3D
Play Mode	Shift + Play
Marker	Sleep

Original	Replacement
Search	Shift + TV/R
Clear	Exit
TV / VCR	TV/R
Timeshift	Options

