









 



 
















 



 















 




 



 






 




Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Vol-		Vol-
	Left		Left
	Right		Right
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	I>/Resume		Shift + Play /
	Surround		Eject / Surround
	Sound		Sound / Title
	Night		Shift + Sleep / Timer
	Mute		Mute / Dimmer
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer
	DIM		Shift + Mute / Dimmer
	Subw +		Up
	Rear +		Shift + CH+ /
	Center +		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Subw -		Down





	Original	Replacement	Original	Replacement
REAR	Rear -	Shift + CH- /		
CENTER	Center -	CH- / Page-		
TV VOL	Tv Vol-	Shift + Vol-		







 



 

 

 









 

 



 





Original	Replacement
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Replacement
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /





 



 

 

 













Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

