
 










 




| Original  | Replacement   |
|---|---|
|  Standby |  Power           |
|  1       |  1               |
|  2       |  2               |
|  3       |  3               |
|  4       |  4               |
|  5       |  5               |
|  6       |  6               |
|  7       |  7               |
|  8       |  8               |
|  9      |  9              |
|  0     |  0             |
|  Vol+  |  Vol+          |
|  Vol-  |  Vol-          |
|  Left  |  Left          |
|  Right |  Right         |
|  I<<   |  I<< / Preset- |
|  >>I   |  >>I / Preset+ |

| Original  | Replacement  |
|---|--|
|  Stop        |  Stop / Hold                |
|  Play/Pause  |  Play / Slow                |
|  Play/Pause  |  Pause / Step / Freeze      |
|  I>/Resume   |  Shift + Play /             |
|  Surround    |  Eject / Surround           |
|  Sound       |  Sound / Title              |
|  Night       |  Shift + Sleep / Timer      |
|  Mute        |  Mute / Dimmer              |
|  Repeat      |  Green / APP / Repeat       |
|  Repeat A-B |  Yellow / YouTube / Repeat |
|  Sleep     |  Sleep / Timer            |
|  DIM       |  Shift + Mute / Dimmer    |
|  Subw +    |  Up                       |
|  Rear +    |  Shift + CH+ /            |
|  Center +  |  CH+ / Page+              |
|  Tv Vol+   |  Shift + Vol+             |
|  Subw -    |  Down                     |











 



 

 

 









 

 



 





| Original     | Replacement   |
|--------------|---------------|
| Standby      | Power         |
| 1            | 1             |
| 2            | 2             |
| 3            | 3             |
| 4            | 4             |
| 5            | 5             |
| 6            | 6             |
| 7            | 7             |
| 8            | 8             |
| 9            | 9             |
| Disc (DVD)   | D.Menu / Top  |
| 0            | 0             |
| Vol+         | Vol+          |
| System (DVD) | Menu / Home   |
| Vol-         | Vol-          |
| I<<          | I<< / Preset- |
| >>I          | >>I / Preset+ |

| Original   | Replacement    |
|------------|----------------|
| Stop       | Stop / Hold    |
| Play/Pause | Play / Slow    |
| I>/Resume  | Shift + Play / |





| Original  | Replacement | Original  | Replacement |
|---|-------------|---|-------------|
|    | Standby     |    | Power       |
|    | 1           |    | 1           |
|    | 2           |    | 2           |
|    | 3           |    | 3           |
|    | 4           |    | 4           |
|    | 5           |    | 5           |
|    | 6           |    | 6           |
|    | 7           |    | 7           |
|    | 8           |    | 8           |
|    | 9           |    | 9           |
|    | 0           |    | 0           |
|    | Up          |    | Up          |
|  | Left        |  | Left        |
|  | OK          |  | OK          |
|  | Right       |  | Right       |
|  | Down        |  | Down        |





