



 

 


 
 

 


 


 
 
 


 
 
 
 
 

 

 

 






| Original | Replacement |
|--|--|
|  Power |  Power |
|  Stop |  Stop |
|  Pause |  Pause |
|  Rec |  Rec |
|  <<< |  <<< |
|  Play |  Play |
|  >>> |  >>> |
|  * |  MENU |
|  Search |  TV/R |
|  [<>] |  PICTURE FORMAT |
|  TV Guide |  GUIDE |
|  List |  DISC NAV LIST |
|  Sources |  TIMER AV |
|  Smart Tv |  APP MEDIA |
|  Home |  HOME SMART |
|  Tv/Exit |  CLEAR EXIT |
|  Red |  A |

| Original | Replacement |
|---|--|
|  Green |  B |
|  Yellow |  C |
|  Blue |  D |
|  Info |  DISPLAY INFO |
|  Options |  SETTINGS OPT |
|  Back |  RETURN BACK |
|  Multiview |  ECO 3D |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  OK |
|  Vol+ |  + VOL |
|  Vol- |  VOL - |
|  Mute |  MUTE |
|  CH+ |  + CH |
|  CH- |  CH - |



