 
 
 
 
 


 

 

 
 









Original		Replacement		Original		Replacement	
	Power		Power		Aspect		Format
	Eject/Auto		Eject		Audio		Dual
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Display		Info
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		OK		Ok
	8		8		LCD Menu		Menu
	9		9		DVD Setup/Exit		Exit
	0		0		DVD Setup/Exit		Options
	-/--		Shift + Guide		Input		AV
	Recall		Pre Ch		P.Mode		Shift + Format
	Vol+		Vol +		S.Mode		Shift + Dual
	Vol-		Vol -		Sleep		Sleep





Original	Replacement
 FAV	 Shift + Pre Ch
 FAV-	 Shift + Ch -
 FAV+	 Shift + Ch +
 EPG	 Guide
 Angle/Text	 Text
 Zoom/Hold	 Shift + Eject
 Tv/Radio	 TV/R
 Goto/Subpage	 3D
 D.Disp/Reveal	 List
 Subtitle	 Subt
 Title/Size	 Smart
 D.Menu/Index	 D. Menu
 I>/Media	 Media
 Play/Pause	 Play
 <<	 <<
 Play/Pause	 Pause
 >>	 >>

Original	Replacement
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Red/Prog	 Red
 Green/Intro	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue

