 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 
 

 





 




 

 


 



 
 
 

 



 




 

 



 
 
 
 

 
 
 



Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 FAV PRE-CH Pre Ch
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -

Original	Replacement
 Aspect	 PICTURE FORMAT Format
 Audio	 SOUND DUAL Dual
 CH+	 + CH Ch +
 CH-	 - CH Ch -
 Display	 DISPLAY INFO Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 LCD Menu	 TOP MENU MENU Menu
 DVD Setup/Exit	 CLEAR EXIT Exit
 DVD Setup/Exit	 SETTINGS OPT Options
 Input	 TIMER AV AV
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual
 Sleep	 PROG SLEEP Sleep





Original		Replacement		Original		Replacement	
	FAV	 + 	Shift + Pre Ch		Rec		Rec
	FAV-	 + 	Shift + Ch -		Stop		Stop
	FAV+	 + 	Shift + Ch +		I<<		I<<
	EPG		Guide		>>I		>>I
	Angle/Text		Text		Red/Prog		Red
	Zoom/Hold	 + 	Shift + Eject		Green/Intro		Green
	Tv/Radio		TV/R		Yellow/Repeat		Yellow
	Goto/Subpage		3D		Blue/A-B		Blue
	D.Disp/Reveal		List				
	Subtitle		Subt				
	Title/Size		Smart				
	D.Menu/Index		D. Menu				
	I>/Media		Media				
	Play/Pause		Play				
	<<		<<				
	Play/Pause		Pause				
	>>		>>				

