 
 





| Original   | Replacement  |
|--|--|
|  Standby      |  Power              |
|  1            |  1                  |
|  2            |  2                  |
|  3            |  3                  |
|  4            |  4                  |
|  5            |  5                  |
|  6            |  6                  |
|  7            |  7                  |
|  8            |  8                  |
|  9            |  9                  |
|  TV / STB   |  AV / Input / RDS |
|  0          |  0                |
|  TV / Radio |  TV/Radio /       |
|  CH +       |  CH+ / Page+      |
|  Mute       |  Mute / Dimmer    |
|  Vol +      |  Vol+             |
|  CH -       |  CH- / Page-      |

| Original   | Replacement   |
|--|---|
|  Pause            |  Pause / Step / Freeze         |
|  Vol -            |  Vol-                          |
|  Up               |  Up                            |
|  Left             |  Left                          |
|  OK               |  OK                            |
|  Right            |  Right                         |
|  Down             |  Down                          |
|  Exit             |  Exit / Cancel / Clear         |
|  Menu             |  Menu / Home                   |
|  Red / SUB-T      |  Subtitle / EQ                 |
|  Red / SUB-T    |  Red / Netflix / Search      |
|  Green          |  Green / APP / Repeat        |
|  Yellow / Timer |  Yellow / YouTube / Repeat   |
|  Blue / Info    |  Blue / Prime Video / Random |
|  Blue / Info    |  Info / Angle                |
|  P.STD          |  Picture / Format            |
|  P.Size         |  Zoom / Size                 |



