




 

 
 



 
 
 
 
 


 
 



 
 
 

 
 



 




 






 

 
 
 



Original	Replacement
 Power	 Power
 D/A Input	 Shift + AV
 Tv/Radio	 TV/R
 Input	 AV
 Bright -	 Shift + Left
 Bright +	 Shift + Right
 Simplink	 Media
 Text	 Text
 Info	 Info
 Live TV	 Shift + Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Stop	 Stop
 Play	 Play
 Pause	 Pause

Original	Replacement
 Rec	 Rec
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Back	 Back
 DVR	 Smart
 Menu	 Menu
 Exit	 Exit
 Guide	 Guide
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -

 


 
 

 
 



 
 





 

 





 

 

 
 
 
 
 

 







Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	I<<		I<<		8		8
	>>		>>		9		9
	>>		>>		0		0
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	1		1				
	2		2				
	3		3				





Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Input		AV		9		9
	Stop		Stop		0		0
	Play		Play				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	PR+		Ch +				
	PR-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

