


 



 

 
 

















Original	Replacement	Original	Replacement
 Power	 Power	 List	 List
 Mute	 Mute	 Recall	 Back
 Source	 AV	 TV Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Text	 Text
 I/II Audio	 Dual	 Info / Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK / Enter	 Ok
 5	 5	 V -	 Vol -
 6	 6	 V +	 Vol +
 7	 7	 P -	 Ch -
 8	 8	 P +	 Ch +
 9	 9	 Red	 Red
 0	 0	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Subtitle		Subt				
	Hold		Pause				
	Size		Format				
	Reveal		Options				
	Mix		Shift + Text				
	Zoom / Index		Eject				
	FAV		Pre Ch				
	Subpage		Shift + Subt				
	TV / Radio		TV/R				
	EPG		Guide				

