



Original	Replacement
 Power	 Power
 Tuner	 Shift + 1
 CD	 Shift + 2
 CDR / Tape	 Shift + 3
 VCR	 Shift + 4
 TV	 Shift + 5
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cinema Link	 Media

Original	Replacement
 DVD / 6 CH.	 Pre Ch
 Menu / Guide	 Menu
 Menu / Guide	 Guide
 OK	 Ok
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Play	 Play
 Stop	 Stop
 I< Channel/Track	 I<<
 Channel/Track >I	 >>I
 Pause	 Pause
 Disc / FR.D./Index	 Smart





	Original	Replacement		Original	Replacement
	Text / Display / T-C	Text			
	Text / Display / T-C	+ Shift + Info			
	News / TA	Info			
	Surr On / Off	Yellow			
	Smart Sound	Dual			
	Loudness	Red			
	Rear Channel +	Ch +			
	Rear Channel -	Ch -			
	Surr. Mode	Blue			
	Test Tone	Green			





Original	Replacement	Original	Replacement
 Power Tv	 Power	 Down Tv	 Down
 TV	 Blue	 Right Tv	 Right
 Mute Tv	 Mute	 Left Tv	 Left
 1 Tv	 1	 Vol+ Tv/CD	 Vol +
 2 Tv	 2	 Vol- Tv/CD	 Vol -
 3 Tv	 3	 Play Tv	 Play
 4 Tv	 4	 Stop Tv	 Stop
 5 Tv	 5	 News/TA Tv	 Info
 6 Tv	 6	 I< Channel/Track	 I<<
 7 Tv	 7	 Channel/Track >I	 >>I
 8 Tv	 8	 Power CD	 Shift + Power
 9 Tv	 9	 CD	 Yellow
 0 Tv	 0	 Mute CD	 Shift + Mute
 Menu/Guide Tv	 Menu	 1 CD	 Shift + 1
 Menu/Guide Tv	 Guide	 2 CD	 Shift + 2
 OK Tv	 Ok	 3 CD	 Shift + 3
 Up Tv	 Up	 4 CD	 Shift + 4





Original	Replacement
5 CD	SHIFT + Shift + 5
6 CD	SHIFT + Shift + 6
7 CD	SHIFT + Shift + 7
8 CD	SHIFT + Shift + 8
9 CD	SHIFT + Shift + 9
0 CD	SHIFT + Shift + 0
Up CD	SHIFT + Shift + Up
Down CD	SHIFT + Shift + Down
Right CD	SHIFT + Shift + Right
Left CD	SHIFT + Shift + Left
News/TA CD	SHIFT + Shift + Info
Stop CD	SHIFT + Shift + Stop
Play CD	Pause
I< CD	<<
>I CD	>>
Pause CD	SHIFT + Shift + Pause
Disc / FR.D./Index CD	Smart

Original	Replacement





Original	Replacement	Original	Replacement
 Power VCR	 Power	 Right VCR	 Right
 VCR	 Yellow	 Left VCR	 Left
 Mute VCR	 Mute	 Vol+ VCR	 Vol +
 1 VCR	 1	 Vol- VCR	 Vol -
 2 VCR	 2	 Play VCR	 Play
 3 VCR	 3	 Stop VCR	 Stop
 4 VCR	 4	 I< Channel/Track VCR	 I<<
 5 VCR	 5	 Channel/Track >I VCR	 >>I
 6 VCR	 6	 Pause VCR	 Pause
 7 VCR	 7	 T·C/Index VCR	 Back
 8 VCR	 8	 Power	 Shift + Power
 9 VCR	 9	 CDR/Tape	 Blue
 0 VCR	 0	 1 CDR/Tape	 Shift + 1
 Menu/Guide	 Menu	 2 CDR/Tape	 Shift + 2
 Up VCR	 Up	 3 CDR/Tape	 Shift + 3
 OK VCR	 Ok	 4 CDR/Tape	 Shift + 4
 Down VCR	 Down	 5 CDR/Tape	 Shift + 5





Original	Replacement
6 CDR/Tape	SHIFT + Shift + 6
7 CDR/Tape	SHIFT + Shift + 7
8 CDR/Tape	SHIFT + Shift + 8
9 CDR/Tape	SHIFT + Shift + 9
0 CDR/Tape	SHIFT + Shift + 0
Up CDR/Tape	SHIFT + Shift + Up
Down CDR/Tape	SHIFT + Shift + Down
Right CDR/Tape	SHIFT + Shift + Right
Left CDR/Tape	SHIFT + Shift + Left
News/TA	DISPLAY INFO Info
Channel/Track <	<<
Channel/Track >	>>
Pause	SHIFT + Shift + Pause
Disc CDR/Tape	HOME SMART Smart

Original	Replacement

