


 









 
 

 
 
 
 
 



 


 
 


 
 
 



 





 


 











 
 


 




 




Original	Replacement	Original	Replacement
 Power	 Power	 CH List	 List
 Source	 AV	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Netflix	 Shift + Media
 3	 3	 Home	 Smart
 4	 4	 Rakuten Tv	 TV/R
 5	 5	 Prime Video	 Media
 6	 6	 Guide	 Guide
 7	 7	 Return	 Back
 8	 8	 Exit	 Exit
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 TTX/MIX	 Text	 Right	 Right
 PRE-CH	 Pre Ch	 Left	 Left
 Vol+	 Vol +	 OK	 Ok
 Vol-	 Vol -	 Red	 Red
 Mute	 Mute	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Settings/[≡i]		Options				
	Info/[≡?]		Info				
	AD/Subt./[≡◇]		Subt				
	Stop		Stop				
	<<		<<				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	>>		>>				

