
















 





 





 



 

 



























































Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Replacement	Original	Replacement
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 Vol +	 Vol+	 Vol +	 Vol+
 Menu	 Menu / Home	 Menu	 Menu / Home
 CH +	 CH+ / Page+	 CH +	 CH+ / Page+
 Vol -	 Vol-	 Vol -	 Vol-
 Source	 AV / Input / RDS	 Source	 AV / Input / RDS
 CH -	 CH- / Page-	 CH -	 CH- / Page-
 Info	 Info / Angle	 Info	 Info / Angle
 Sleep	 Sleep / Timer	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Recall	 Back / Return
 L / R	 Eject / Surround	 L / R	 Eject / Surround
 Index / Play	 Play / Slow	 Index / Play	 Play / Slow
 Index / Play	 Display / Media	 Index / Play	 Display / Media





	Original	Replacement		Original	Replacement
	Zoom / Pause	Zoom / Size		Green / Subtitle	Green / APP / Repeat
	Zoom / Pause	Pause / Step / Freeze		Yellow / Fav	Fav / Marker / PC
	Reveal / Stop	Stop / Hold		Yellow / Fav	Yellow / YouTube / Repeat
	Reveal / Stop	Setup / OPT /		Blue / EPG	Guide / EPG / -/--
	TTX	Text / Goto		Blue / EPG	Blue / Prime Video / Random
	Hold / I<<	I<< / Preset-			
	Hold / I<<	+ Shift + Stop /			
	List / >>I	>>I / Preset+			
	List / >>I	Smart / List			
	Language / <<	<< / Tune-			
	Language / <<	Audio / Lang I/II			
	Save / >>	>> / Tune+			
	Save / >>	+ Shift + Rec / Rec Mode			
	Red / Radio / Rec	Rec / Rec Mode			
	Red / Radio	Red / Netflix / Search			
	Red / Radio / Rec	TV/Radio /			
	Green / Subtitle	Subtitle / EQ			

