


 
 



 
 

 



 


 

 

 


 






 
 


 
 



 


 
 

 
 
 
 








Original		Replacement		Original		Replacement	
	Power		Power		Info		Info
	Mute		Mute		Up		Up
	1		1		Right		Right
	2		2		Down		Down
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Exit		Exit
	6		6		Menu		Menu
	7		7		EPG		Guide
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		CH + / Page +		Ch +
	Text		Text		CH - / Page -		Ch -
	Audio		Dual		Red		Red
	Help		D. Menu		Green		Green
	Back		Back		Yellow		Yellow
	Subtitle		Subt		Blue		Blue





Original		Replacement		Original		Replacement	
	Rec		Rec				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	Timer		AV				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	V.Mode		Format				
	TV		TV/R				
	Radio		Shift + TV/R				
	Sleep		Sleep				

