






 



















 













 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Shift + Menu /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-
 Aspect	 Shift + Picture / Format





Original	Replacement
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Tv/Radio	 TV/Radio /
 Freeze	 Shift + Pause / Step /
 Sub-T	 Subtitle / EQ
 Rec.List	 Shift + Rec / Rec Mode
 Angle	 Shift + Info / Angle
 TTX	 Text / Goto
 Hold	 Shift + Stop /
 Reveal	 Shift + Back / Return
 Sub-P	 Setup / OPT /
 Eject/Index	 Eject / Surround
 Zoom	 Zoom / Size
 Play	 Play / Slow
 Pause/TSR	 Pause / Step / Freeze
 Stop/Auto	 Stop / Hold
 <<	 << / Tune-

Original	Replacement
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+
 Red/D.Setup	 Red / Netflix / Search
 Green/D.Menu	 Green / APP / Repeat
 Yellow/D.Title	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

