





 

















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	Up		Up
	P+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK		OK
	Down		Down
	P-		CH- / Page-
	i		Info / Angle
	CL		D.Menu / Top
	Mute		Mute / Dimmer
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Timer		Sleep / Timer
	Yellow		Yellow / YouTube / Repeat
	Picture		Picture / Format
	Blue		Blue / Prime Video / Random
	Sound		Sound / Title
	(I)-		Shift + CH- / Page-





Original	Replacement	Original	Replacement
 (I)+	 Shift + CH+ /		
 *-	 I<< / Preset-		
 *+	 >>I / Preset+		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Pause	 Pause / Step / Freeze		
 INDEX Index + <<	 Shift + << /		
 INDEX Index + >	 Shift + >> /		
 Stop	 Stop / Hold		

