



Original	Replacement
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / --
Menu [M]	Menu / Home
Info [i]	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





Original	Replacement	Original	Replacement
 [≡o]	 Sleep / Timer		
 Hold	 Stop / Hold		
 [≡X]	 Exit / Cancel / Clear		
 Mix / PIP Swap	 Smart / List		
 PIP / Size	 Zoom / Size		
 PIP Down / [≡?]	 I<< / Preset-		
 PIP Up / Index	 >>I / Preset+		
 [TV]	 TV/Radio /		
 [AV]	 AV / Input / RDS		

Original	Replacement	Original	Replacement

