

 

 

 

 



 



 



 










 
 







 



 

 

 

 



 



 













Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol+
 Mute	 Mute / Dimmer	 MTS	 Info / Angle
 1	 1	 CH +	 CH+ / Page+
 2	 2	 Vol -	 Vol-
 3	 3	 Aspect	 Shift + Picture / Format
 4	 4	 CH -	 CH- / Page-
 5	 5	 Guide	 Guide / EPG / -/-
 6	 6	 Home	 Shift + Menu / Home
 7	 7	 Rec	 Rec / Rec Mode
 8	 8	 Menu	 Menu / Home
 9	 9	 Up	 Up
 List	 Smart / List	 Source	 AV / Input / RDS
 0	 0	 Left	 Left
 Recall	 Back / Return	 Enter	 OK
 P.Mode	 Picture / Format	 Right	 Right
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer	 Down	 Down





Original	Replacement
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
Play/Pause /	Pause / Step / Freeze
Play/Pause /	+ Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Text / Goto
I<< / SUB.PG	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Stop / Hold
CAP	D.Menu / Top
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /

Original	Replacement
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	+ Shift + Stop /



Program