 

















 

 



 

 

 



 



 



 
 



 



 


 
 



 














Original	Replacement	Original	Replacement
 Standby/On	 Power	 Pause/PTY Seek	 Pause / Step / Freeze
 1	 1	 Random/PTY Seek Start	 Blue / Prime Video / Random
 2	 2	 I<</Preset	 I<< / Preset-
 3	 3	 Play	 Play / Slow
 4	 4	 >>I/Preset Up	 >>I / Preset+
 5	 5	 GUI	 Smart / List
 6	 6	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 0	 0	 Right	 Right
 Dimmer	 Shift + Mute / Dimmer	 Set Up	 Setup / OPT /
 Sleep	 Sleep / Timer	 Down	 Down
 Repeat	 Green / APP / Repeat	 Top	 Back / Return
 A-B	 Yellow / YouTube / Repeat	 Top	 D.Menu / Top
 Stop	 Stop / Hold	 Mute	 Mute / Dimmer
 Prog/Freq/Text	 TV/Radio /	 Volume+	 Vol+

Original	Replacement	Original	Replacement
 Standby/On	 Power	 Pause/PTY Seek	 Pause / Step / Freeze
 1	 1	 Random/PTY Seek Start	 Blue / Prime Video / Random
 2	 2	 I<</Preset	 I<< / Preset-
 3	 3	 Play	 Play / Slow
 4	 4	 >>I/Preset Up	 >>I / Preset+
 5	 5	 GUI	 Smart / List
 6	 6	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
9	9	Enter	OK
0	0	Right	Right
Dimmer	Shift + Mute / Dimmer	Set Up	Setup / OPT /
Sleep	Sleep / Timer	Down	Down
Repeat	Green / APP / Repeat	Top	Back / Return
A-B	Yellow / YouTube / Repeat	Top	D.Menu / Top
Stop	Stop / Hold	Mute	Mute / Dimmer
Prog/Freq/Text	TV/Radio /	Volume+	Vol+





Original	Replacement
Night	Display / Media
Volume-	Vol-
EQ	Shift + Subtitle / EQ
TV	Shift + 1
DVD/CD	Shift + 2
DVD/CD	Shift + 3
Direct	AV / Input / RDS
AUX	Shift + 7
Tuner	Shift + 6
Subtitle	Subtitle / EQ
Angle	Info / Angle
Zoom	Zoom / Size
Audio	Audio / Lang I/II

Original	Replacement





Original	Replacement
Power Tv	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV CH+	CH+ / Page+
TV CH-	CH- / Page-
TV Input	AV / Input / RDS
TV Vol+	Vol+
TV Vol-	Vol-
TV	Shift + 1

Original	Replacement
DVD/CD	Shift + 3
DVD/CD	Shift + 2
AUX	Shift + 7
Tuner	Shift + 6
























 

Original	Replacement	Original	Replacement
Standby/On	Power	Volume+	Vol+
1	1	Volume-	Vol-
2	2	TV	Shift + 1
3	3	DVD/CD	Shift + 3
4	4	DVD/CD	Shift + 2
5	5	AUX	Shift + 7
6	6	Tuner	Shift + 6
7	7		
8	8		
9	9		
0	0		
Prog/Freq/Text	TV/Radio /		
Pause/PTY Seek	Pause / Step / Freeze		
Random/PTY Seek Start	Play / Slow		
I<</Preset	I<< / Preset-		
>>I/Preset Up	>>I / Preset+		
Mute	Mute / Dimmer		

Original	Replacement
Volume+	Vol+
Volume-	Vol-
TV	Shift + 1
DVD/CD	Shift + 3
DVD/CD	Shift + 2
AUX	Shift + 7
Tuner	Shift + 6





Original	Replacement
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 TV	 Shift + 1
 DVD/CD	 Shift + 3
 DVD/CD	 Shift + 2

Original	Replacement
 AUX	 Shift + 7
 Tuner	 Shift + 6

