



Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 TV / RAD	 TV/R	 Vol -	 Vol -
 Energy Saving	 3D	 Mark / Fav	 Pre Ch
 AV Mode	 Shift + AV	 Mute	 Mute
 Input	 AV	 P + / Page +	 Ch +
 1	 1	 P - / Page -	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Ratio	 Format
 4	 4	 Q.Menu	 D. Menu
 5	 5	 Up	 Up
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Left	 Left
 9	 9	 OK	 Ok
 0	 0	 Guide	 Guide
 List	 List	 Info	 Info
 Q.View	 Media	 Return / Exit	 Exit





Original		Replacement		Original	Replacement
	Return / Exit		Back		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	T.Opt		Options		
	Subtitle		Subt		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	<<		I<<		
	>>		>>I		
	Simplink		Smart		

