













 



 

 
















 


























 






 

 



















 










 










Original	Replacement	Original	Replacement
 Standby	 Power	 Display	 Display / Media
 Eject	 Eject / Surround	 Tv/Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 FAV	 Shift + Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 Aspect	 Shift + Picture / Format	 Rec	 Rec / Rec Mode
 0	 0	 CH+	 CH+ / Page+
 Recall/+10	 Fav / Marker / PC	 Vol-	 Vol-
 TVG	 Guide / EPG / -/--	 Mute	 Mute / Dimmer
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS

Original	Replacement	Original	Replacement
 Standby	 Power	 Display	 Display / Media
 Eject	 Eject / Surround	 Tv/Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 FAV	 Shift + Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 Aspect	 Shift + Picture / Format	 Rec	 Rec / Rec Mode
 0	 0	 CH+	 CH+ / Page+
 Recall/+10	 Fav / Marker / PC	 Vol-	 Vol-
 TVG	 Guide / EPG / -/--	 Mute	 Mute / Dimmer
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS





Original	Replacement
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Title/Text	Text / Goto
D.Menu/Hold	D.Menu / Top
D.Setup/Reveal	Setup / OPT /
Subpage	Smart / List
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop	Stop / Hold
Index	Info / Angle
Zoom/Size	Zoom / Size
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Red/Goto	Red / Netflix / Search

Original	Replacement
Green/Angle	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random

