 








| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause/[≡] |  Pause / Step / Freeze |
|  Stop/[≡+] |  Stop / Hold |
|  Rec/[≡◆] |  Rec / Rec Mode |
|  <</[≡o] |  << / Tune- |
|  <</[≡i] |  << / Preset- |
|  >> /[≡?] |  >> / Preset+ |
|  >>/[≡x] |  >> / Tune+ |
|  Info |  Info / Angle |
|  OI/II/Audio |  Audio / Lang I/II |
|  [≡] |  Text / Goto |
|  ←/<x] |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Original | Replacement |
|---|--|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  * |  Setup / OPT / |
|  0 |  0 |
|  Up |  Up |
|  [→] |  AV / Input / RDS |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Netflix |  Shift + Red / Netflix / |
|  YouTube |  Shift + Yellow / YouTube / |
|  Vol+ |  Vol+ |





| Original | Replacement |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause [/≡] |  Pause / Step / Freeze |
|  Stop/[≡+] |  Stop / Hold |
|  Rec/[≡◆] |  Rec / Rec Mode |
|  <</[≡o] |  << / Tune- |
|  <</[≡i] |  << / Preset- |
|  >> /[≡?] |  >> / Preset+ |
|  >>/[≡x] |  >> / Tune+ |
|  Info |  Info / Angle |
|  O) /II/Audio |  Audio / Lang I/II |
|  [≡] |  Text / Goto |
|  ←/<x] |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Original | Replacement |
|---|---|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  * |  Setup / OPT / |
|  0 |  0 |
|  [→] |  AV / Input / RDS |
|  |  Up |
|  |  Left |
|  OK |  OK |
|  |  Right |
|  |  Down |
|  Netflix |  Shift + Netflix / |
|  YouTube |  Shift + YouTube / |
|  |  Vol+ |



