








 




 
 
 
 
 
 


 







 

 

 
 


 
 
 


 
 
 
Original	Replacement
 Power	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Nicam / A2	 Shift + Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall / Mouse	 Back
 FAV	 Pre Ch
 Red	 Red
 Settings	 Options
 Home	 Smart
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit





Original	Replacement
 Vol +	 Vol +
 Vol -	 Vol -
 Media	 Media
 TV / Radio	 TV/R
 CH +	 Ch +
 CH -	 Ch -
 Play/Pause / Text	 Play
 Play/Pause / Text	 Pause
 Play/Pause / Text	 Text
 << / Size	 <<
 << / Size	 Eject
 >> / Reveal	 >>
 Stop / Hold	 Stop
 I<< / Index	 I<<
 >>I / Subpage	 >>I
 Cancel	 Shift + Exit
 Subtitle	 Subt

Original	Replacement
 Auto	 Shift + Media
 Repeat	 Shift + Text
 A-B	 Shift + Play
 Aspect	 Format

