


 





 





 





 

 











 
 

 




 
 
 
 
 

 
 








 










| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Auto |  Media |
|  Mute |  Mute |  Display |  Shift + Info |
|  1 |  1 |  CH+ |  Ch + |
|  2 |  2 |  CH- |  Ch - |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Right |  Right |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Left |  Left |
|  7 |  7 |  Enter |  Ok |
|  8 |  8 |  LCD Menu |  Menu |
|  9 |  9 |  DVB Menu |  D. Menu |
|  0 |  0 |  Input |  AV |
|  -- |  Shift + Guide |  P.Mode |  Format |
|  Recall |  Back |  S.Mode |  Shift + Options |
|  Vol+ |  Vol + |  Sleep |  Sleep |
|  Vol- |  Vol - |  Info |  Info |
|  Nicam |  Smart |  FAV |  Pre Ch |

| Original | Replacement | Original | Replacement |
|--|---|---|--|
|  Power |  Mute |  Shift | |
|  TV |  DVD |  SAT |  AUX |
|  PLAY MODE |  II |  ■ |  REC MODE |
|  ⏮ |  ⏭ |  ⏏ | |
|  DISC NAV |  SOUND |  AD |  SETTINGS |
|  LIST |  DUAL |  SUBT |  OPT |
|  PROG |  SEARCH |  PICTURE |  ECO |
|  SLEEP |  TV/R |  FORMAT |  3D |
|  E-MANUAL |  REPEAT |  ZOOM |  TIMER |
|  D.MENU |  TEXT |  ▲ |  AV |
|  TOP MENU |  MENU |  ▲ |  INFO |
|  CLEAR |  OK |  ► | |
|  EXIT |  HOME |  ◄ | |
|  + |  SMART |  ▼ | |
|  - |  APP |  BACK | |
|  1 |  MEDIA |  + | |
|  2 |  - | | |
|  3 | | | |
|  4 | | | |
|  5 | | | |
|  6 | | | |
|  7 | | | |
|  8 | | | |
|  9 | | | |
| 0 | | | |
| GUIDE | | | |
| A | | | |
| B | | | |
| C | | | |
| D | | | |
|  | | | |
| www.mandis.tv | | | |



