

 

 

 

 

 

 

 
 
 

 
 

 

 

 

 

 



 
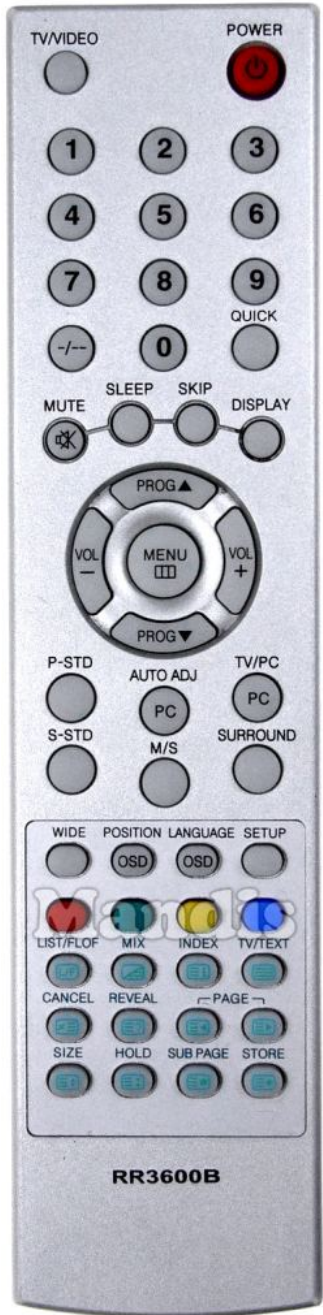 








Original	Replacement
 Power	 Power
 TV / Video	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 /--	 GUIDE
 Quick	 Pre Ch
 Mute	 Mute
 Sleep	 Sleep
 Skip	 Exit

Original	Replacement
 Display	 Info
 Up / Prog +	 Ch +
 Up / Prog +	 Up
 Down / Prog -	 Ch -
 Down / Prog -	 Down
 Right / Vol +	 Vol +
 Right / Vol +	 Right
 Left / Vol -	 Vol -
 Left / Vol -	 Left
 Menu	 Menu
 Menu	 Ok
 P-STD	 Shift + Format
 S-STD	 Dual
 PC Auto ADJ	 Smart
 PC / TV/PC	 Media
 M / S	 TV/R
 Surround	 Shift + Dual





Original	Replacement
 Wide	 Format
 OSD Position	 3D
 OSD Language	 Shift + 3D
 Setup	 Options
 Red	 Red
 Green	 Green
 List / FLOF	 List
 Yellow	 Yellow
 Blue	 Blue
 Mix	 Shift + Text
 Index	 Shift + Info
 TV / Text	 Text
 Cancel	 Back
 Subpage	 Subt
 Reveal	 Play
 Page -	 I<<
 Page +	 >>I

Original	Replacement
 Size	 Eject
 Hold	 Stop
 Store	 Shift + Smart

