









Original	Replacement
Power	Power
Eject	Eject / Surround
Tv/VCR	TV/Radio /
Mute	Mute / Dimmer
i/Menu	Menu / Home
Up	Up
Prog Up	CH+ / Page+
AV	AV / Input / RDS
Left	Left
Vol-	Vol-
OK/CLK/CNT	OK
Right	Right
Vol+	Vol+
Clear	Exit / Cancel / Clear
Down	Down
Prog Down	CH- / Page-
CM Skip	Back / Return

Original	Replacement
LP	Smart / List
Stop	Stop / Hold
P/Still	Pause / Step / Freeze
Rec/ITR	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
1	1
2	2
3	3
eZ Power Off	Red / Netflix / Search
4	4
5	5
6	6
eZ Repeat	Green / APP / Repeat
7	7
8	8



















Original		Replacement	
	9		9
	0		0
	C.Lock		Display / Media

Original		Replacement	







	Original	Replacement	Original	Replacement
	 Power	 Power		
	 Mute	 Mute / Dimmer		
	 Tv AV	 AV / Input / RDS		
	 Prog Up	 CH+ / Page+		
	 Prog Down	 CH- / Page-		
	 Vol+	 Vol+		
	 Vol-	 Vol-		

