



 











 

 

 

 

 

 



 













Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Tv/VCR	 TV/Radio /
 Mute	 Mute / Dimmer
 i/Menu	 Menu / Home
 Up	 Up
 Prog Up	 CH+ / Page+
 AV	 AV / Input / RDS
 Left	 Left
 Vol-	 Vol-
 OK/CLK/CNT	 OK
 Right	 Right
 Vol+	 Vol+
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Prog Down	 CH- / Page-
 CM Skip	 Back / Return

Original	Replacement
 LP	 Smart / List
 Stop	 Stop / Hold
 P/Still	 Pause / Step / Freeze
 Rec/ITR	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 eZ Power Off	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 eZ Repeat	 Green / APP / Repeat
 7	 7
 8	 8





Original	Replacement
 9	 9
 0	 0
 C.Lock	 Display / Media

Original	Replacement







	Original	Replacement		Original	Replacement
		Power		Power	
		Mute		Mute / Dimmer	
		Tv AV		AV / Input / RDS	
		Prog Up		CH+ / Page+	
		Prog Down		CH- / Page-	
		Vol+		Vol+	
		Vol-		Vol-	

	Original	Replacement

