




 
 
 
 




 
 

 



 




 

 

 




 

 
Original	Replacement
 Standby/On	 Power
 Tv/Video	 TV/R
 Output Select	 AV
 DV	 Green
 HDD	 Yellow
 DVD	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 Exit

Original	Replacement
 Memo/Mark	 Pre Ch
 PR/CH+	 Ch +
 PR/CH-	 Ch -
 F1	 Shift + 1
 F2	 Shift + 2
 Edit	 Guide
 Prog	 Sleep
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<





Original	Replacement
 >>I	 >>I
 <</Slow-	 <<
 Play	 Play
 >>/Slow+	 >>
 Rec	 Rec
 Stop/Clear	 Stop
 Pause	 Pause
 Display	 Info
 On Screen	 3D
 ←	 Media
 →	 Smart
 Rec	 Format
 Audio	 Dual
 Subtitle	 Subt
 Angle/EE Check	 Red
 EE	 Eject
 Dubbing	 D. Menu

Original	Replacement
 Progressive Scan	 Text
 Set Up	 Options







Original	Replacement	Original	Replacement
 Standby/On	 Power	 PR/CH-	 Ch -
 Tv/Video	 TV/R	 Input Select	 AV
 Mute	 Mute	 F1	 Smart
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Cancel	 Back		
 Vol+	 Vol +		
 Vol-	 Vol -		
 PR/CH+	 Ch +		

