


 
 


 

 


 
 



 










Original	Replacement
Power TV	Power
Power STB	+ Shift + Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	Text
PRE-CH	Pre Ch
Vol+	Vol +
Vol-	Vol -

Original	Replacement
Mute	Mute
CH.List	List
P+	Ch +
P-	Ch -
Menu	Menu
Smart Hub	Smart
Guide	Guide
Tools	Options
Info	Info
Back/Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Red	Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 D	 Dual		
 Status	 TV/R		
 More	 3D		
 E-Manual	 D. Menu		
 Recommend	 Format		
 AD/Subt	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>I	 >>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

