



Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		LCD Menu		Menu
	8		8		Exit		Exit
	9		9		Input		AV
	0		0		PMode		Shift + Format
	-/-		Guide		SMode		Shift + Dual
	Recall		Back		Sleep		Sleep
	Vol +		Vol +		Fav		Pre Ch
	Vol -		Vol -		Fav -		Shift + Down
	Nicam		Smart		Fav +		Shift + Up



