


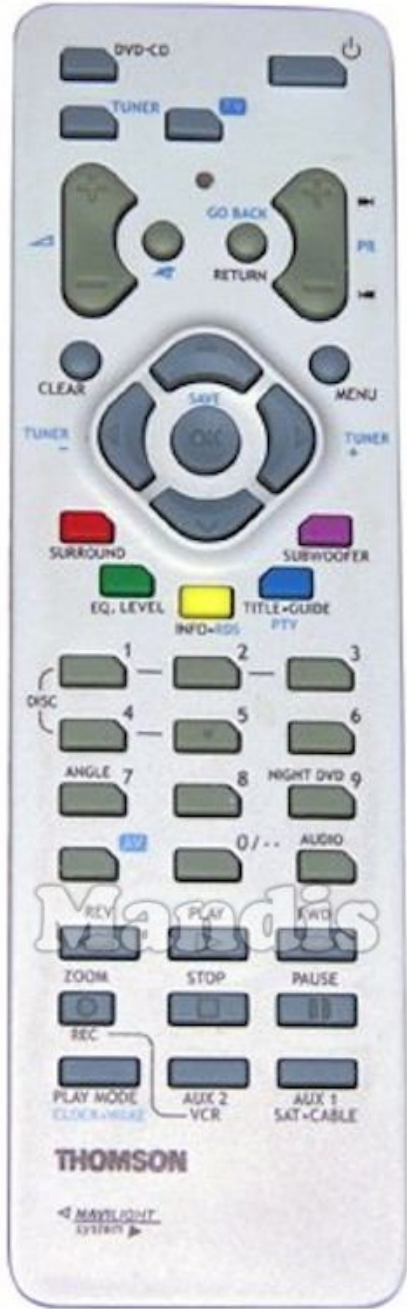

Original	Replacement
 Power	 Power
 Mute	 Mute
 Menu	 Menu
 1 / Disc 1	 1
 2 / Disc 2	 2
 3 / Disc 3	 3
 4 / Disc 4	 4
 5 / Disc 5	 5
 6	 6
 7 / Angle	 7
 8	 8
 9 / Night DVD	 9
 0 / --	 0
 Aux 1 / SAT /	 AV
 Aux 2 / VCR	 Shift + AV
 Tuner	 Shift + TV/R
 TV	 TV/R

Original	Replacement
 DVD / CD	 Media
 Vol +	 Vol +
 Vol -	 Vol -
>> button icon" data-bbox="507 295 544 325"/>	
 <<	
 Up	
 Right	
 Down	
 Left	
 OK / Save	 Ok
 Return	 Back
 Clear / Sleep	 Sleep
 Play Mode	 Shift + Play
 Pause	 Pause
 Stop	 Stop
 Rec / Zoom	 Rec
 << REV	 <<





Original	Replacement
 Play	 Play
 >> FWD	 >>
 Audio	 Dual
 PR +	 Ch +
 PR -	 Ch -
 Tuner -	 Shift + Left
 Tuner +	 Shift + Right
 Purple / Subwoofer	 Pre Ch
 Red / Surround	 Red
 Green / EQ Level	 Green
 Yellow / Info	 Yellow
 Blue / Title/Guide	 Blue
 Yellow / Info	 Info
 Blue / Title/Guide	 Guide

Original	Replacement

