










 
 



 













 


















Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Goto		Smart		Mute		Mute
	Open/Close		Eject		<</REV		<<
	1		1		>>/FWD		>>
	2		2		<</Prev		<<
	3		3		>> /Next		>>
	4		4		Play		Play
	5		5		Pause		Pause
	6		6		Stop		Stop
	7		7		Step		Pre Ch
	8		8		Menu		Menu
	9		9		Title		Info
	0		0		Setup		Options
	10+		Guide		PBC		Yellow
	Zoom+		Ch +		Up		Up
	Zoom-		Ch -		Down		Down
	Vol+		Vol +		Right		Right





Original	Replacement	Original	Replacement
	Left		Left
	OK		Ok
	OSD		List
	Angle		AV
	Subtitle		Subt
	Video		TV/R
	A-B		Media
	Prog		Sleep
	Return		Back
	Repeat		Text
	Slow		Format
	Audio		Dual
	N/P		3D
	Clear		Exit

Original	Replacement	Original	Replacement

