









 
 
 


 

 
 




	Original	Replacement		Original	Replacement
	POWER	Power		Power	
	VOL-	Vol -		Vol -	
	VOL+	Vol +		Vol +	
	SOURCE	Source		AV	
	1	1		1	
	2	2		2	
	3	3		3	
	4	4		4	
	5	5		5	
	6	6		6	
	7	7		7	
	8	8		8	
	9	9		9	
	0	0		0	
	-/--	-/--	 + 	Shift + Guide	
	MUTE	Mute		Mute	
		Red		Red	

	Original	Replacement		Original	Replacement
		Green		Green	
		Yellow / Subtitle		Yellow	
		Blue / Audio		Blue	
		Yellow / Subtitle		Subt	
		Blue / Audio		Dual	
	REC	Rec		Rec	
		Up		Up	
		Left		Left	
		Right		Right	
		Down		Down	
	ENTER	Enter		Ok	
		Stop		Stop	
		Play / Pause		Play	
		Play / Pause		Pause	
		Back		Back	
	SETUP	Setup		Options	
	TTX	TTX		Text	





	Original	Replacement		Original	Replacement
EPG	EPG	Guide			
FAV	FAV	Pre Ch			
TV/RADIO	TV / Radio	TV/R			
EXIT	Exit	Exit			
DISPLAY	Display	Info			
	I<<	I<<			
	>>I	>>I			
	<<	<<			
	>>	>>			

