



 

 


 
 




 

 

 




 



 



 

 


 





 

 



 

 




 















Original		Replacement		Original		Replacement	
	Power		Power		i		Info
	Source		AV		P +		Ch +
	1		1		P -		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back
	0		0		Exit		Exit
	TV		TV/R		World		Smart
	Recall		Pre Ch		Music/Camera/Ph		Media
	V +		Vol +		Guide		Guide
	V -		Vol -		Fav 1 / O		Shift + 1
	Mute		Mute		Fav 2 / Q		Shift + 2





Original		Replacement		Original		Replacement	
	[≡]/Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang		Dual				
	Dialog		Subt				
	-[O]-		Options				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

