



Original	Replacement	Original	Replacement
	Power		Power
	TV / AV		AV / Input / RDS
	TV / TXT		Text / Goto
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Display / Media
	DTV		Setup / OPT /
	Hold		Stop / Hold
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH +		CH+ / Page+
	Menu		Menu / Home
	Vol +		Vol+

Original	Replacement	Original	Replacement
	CH -		CH- / Page-
	Exit		Exit / Cancel / Clear
	Vol -		Vol-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



