








 









 



 











 



 



 





 

 


 


 





 





 

 




 
 
 
 








Original		Replacement		Original		Replacement	
	TV		TV/R		Yellow		Yellow
	Video		Smart		Blue		Blue
	PC		Media		1		1
	Text		Text		2		2
	P+		Ch +		3		3
	Up		Up		4		4
	P-		Ch -		5		5
	Down		Down		6		6
	Right		Right		7		7
	Vol+		Vol +		8		8
	Vol-		Vol -		9		9
	Menu		Menu		0		0
	Menu		Ok		-/-		Guide
	Mute		Mute		L / ?		List
	Red / M		Red		Freeze		Pause
	Green		Green		M/S		Options
					PIP		3D





Original		Replacement		Original	Replacement
	Auto		Back		
	F[+]		Format		
	i		Info		
	F1		Shift + 1		
	Clock		AV		
	F2		Shift + 2		
	F3		Shift + 3		
	F4		Shift + 4		
	Power		Power		

