





 



 

 

 

 









 



























 
 
















Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	V.Format		Shift + Picture / Format
	Sleep		Sleep / Timer
	Text		Text / Goto
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[[≡]]		Smart / List
	0		0
	Recall		Back / Return
	Vol -		Vol-
	Vol +		Vol+
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Page Down		Shift + CH- /
	Down		Down
	Page Up		Shift + CH+ /
	FAV		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Info		Info / Angle





Original	Replacement	Original	Replacement
	✓		I<<
	Red		>>I
	Green		SAT
	Yellow / Audio		Picture
	Yellow / Audio		Book
	Blue / Subtitle		Book 2
	Blue / Subtitle		
	Play		
	Stop		
	Pause		
	Rec		
	>[≡]		
	I>		
	<<		
	>>		
	Zoom		
	>I<		
	Display / Media		I<< / Preset-
	Red / Netflix / Search		>>I / Preset+
	Green / APP / Repeat		Shift + 0
	Yellow / YouTube / Repeat		Picture / Format
	Audio / Lang I/II		Setup / OPT /
	Blue / Prime Video / Random		Shift + Setup / OPT / Tools
	Subtitle / EQ		
	Play / Slow		
	Stop / Hold		
	Pause / Step / Freeze		
	Rec / Rec Mode		
	Shift + Text /		
	Shift + Pause / Step /		
	<< / Tune-		
	>> / Tune+		
	Zoom / Size		
	Shift + Stop /		

Hold

