

 








 
 

 

 

 



 
 




Original	Replacement	Original	Replacement
Standby/On	Power	Repeat/Freq/Text	Text
Eject	Eject	Prog	Shift + Sleep
1	1	A-B	Pre Ch
2	2	Stop	Stop
3	3	Pause/PTY Seek	Pause
4	4	Shuffle/PTY Seek Start	TV/R
5	5	I<</Preset	I<<
6	6	Play	Play
7	7	>>I/Preset Up	>>I
8	8	Menu	Menu
9	9	On Screen	3D
0	0	Set Up	Options
Dimmer	Guide	Top	Back
Sleep	Sleep	Up	Up
Bass	Green	Down	Down
Treble	Blue	Right	Right
Night	Exit	Left	Left


 


 
 

 




Original	Replacement	Original	Replacement
 Enter	 Ok		
 Area	 Info		
 Enhancer	 AV		
 Mode	 D. Menu		
 Direct	 Red		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 Surround	 List		
 AUX	 Media		
 USB	 Smart		
 Subtitle	 Subt		
 Angle	 Format		
 Zoom	 Shift + Eject		
 Audio	 Dual		





Original	Replacement	Original	Replacement
 Standby/On	 Power	 >>I/Preset Up	 >>I
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Repeat/Freq/Text	 Text		
 Prog	 Sleep		
 Stop	 Stop		
 Pause/PTY Seek	 Pause		
 Shuffle/PTY Seek Start	 TV/R		
 I<</Preset	 I<<		



Down