







 




 
 




 


 







 

 







Original		Replacement		Original		Replacement	
	Power		Power		Green		Green
	Input TV		AV		Yellow		Yellow
	Input AV		Shift + AV		Blue		Blue
	(<>)		Shift + Dual		Text		Text
	Viera Link		Dual		Index		Shift + Info
	Option		Options		Hold		Shift + Text
	Direct TV Rec		TV/R		1		1
	Aspect		Format		2		2
	Exit		Exit		3		3
	Up		Up		4		4
	Left		Left		5		5
	OK		Ok		6		6
	Right		Right		7		7
	Down		Down		8		8
	Menu		Menu		9		9
	Return		Back		0 / VCR		0
	Red		Red		i		Info





Original		Replacement		Original		Replacement	
	Mute		Mute		DVD >>I		>>I
	CH +		Ch +		DVD >>		>>
	CH -		Ch -		VCR >>		Shift + >>
	Vol +		Vol +		VCR >>I		Shift + >>I
	Vol -		Vol -		DVD Stop		Stop
	VCR Power		Smart		VCR Stop		Shift + Stop
	DVD Power		Media		DVD Pause/Step		Pause
	DVD Rec		Rec		VCR Pause / Step		Shift + Pause
	VCR Rec		Shift + Rec		DVD Play		Play
	DVD		Shift + Ch -		VCR Play		Shift + Play
	VCR		Shift + Down				
	DVD		Shift + Ch +				
	VCR		Shift + Up				
	DVD I<<<		I<<<				
	DVD <<<		<<<				
	VCR <<<		Shift + <<<				
	VCR I<<<		Shift + I<<<				

