 











 


Original		Replacement		Original		Replacement	
	VHS Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		CH + / Tracking/V-Lock +		Ch +
	TV CH -		Shift + Ch -		CH - / Tracking/V-Lock -		Ch -
	TV Volume +		Vol +		Input		Media
	TV Volume -		Vol -		Repeat		Text
	Operation Select VHS		Smart		I<< Index/Skip		I<<
	1		1		>>I Index/Skip		>>I
	2		2		<< REW		<<
	3		3		>> FF		>>
	4		4		Stop		Stop
	5		5		Pause / Slow		Pause
	6		6		Play		Play
	7		7		Menu / Play List		Menu
	8		8		Menu / Play List		List





Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return / Exit	 Back
 Prog / Check	 +  Shift + Sleep
 i-Timer	 Sleep
 Prog Play / Play Mode	 +  Shift + Right
 << JET REW /	 Options
 Timer	 AV
 DVD-RAM	 Format
 Rec Mode	 +  Shift + Rec
 Rec	 Rec
 VHS Status	 Info
 A / Cinema	 Red
 B / Off Timer	 Green

Original	Replacement
 Ext Link	 3D

 
 



 

 

 

 
 

 
 
 


 






Original		Replacement		Original		Replacement	
	DVD Power		Power		9		9
	Audio		Dual		0		0
	TV Power		Shift + Power		-/-- / ≥10		Guide
	TV AV		Shift + AV		Cancel / Reset		Exit
	TV CH +		Shift + Ch +		Repeat		Text
	TV CH -		Shift + Ch -		I<< Index/Skip		I<<
	TV Volume +		Vol +		>>I Index/Skip		>>I
	TV Volume -		Vol -		<< REW		<<
	Operation Select DVD		Smart		>> FF		>>
	1		1		Stop		Stop
	2		2		Pause / Slow		Pause
	3		3		Play		Play
	4		4		Direct Navigator / Top Menu		Shift + Menu
	5		5		Direct Navigator / Top Menu		D. Menu
	6		6		Menu / Play List		Menu
	7		7		Up		Up
	8		8		Left		Left





	Original	Replacement	Original	Replacement
	Enter		Ok	
	Right		Right	
	Down		Down	
	Functions		Options	
	Return / Exit		Back	
	Setup		Shift + Options	
	DVD-RAM		Format	
	DVD Status		Info	
	A / Quick OSD		Red	
	B / Quick Replay		Green	
	Manual Skip		3D	

