






 







 



 



 



 













 

 

 









 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Pause / Step	 Pause
 Open / Close	 Eject	 Play	 Play
 1	 1	 Stop	 Stop
 2	 2	 Home	 Smart
 3	 3	 Menu / List	 Menu
 4	 4	 Up / PR/CH +	 Up
 5	 5	 Up / PR/CH +	 Ch +
 6	 6	 Down / PR/CH -	 Down
 7	 7	 Down / PR/CH -	 Ch -
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 Right	 Right
 AV / Input	 AV	 Display	 Info
 << Scan	 <<	 Return	 Back
 Scan >>	 >>	 Audio	 Dual
 I<< Skip	 I<<	 Subtitle	 Subt
 Skip >>I	 >>I	 Zoom	 Shift + Eject





Original		Replacement	
	Setup		Options
	Rec		Rec
	Rec Mode		Shift + Rec
	Thumbnail		Media
	CHP.ADD		Text
	Play Mode		Shift + Play
	Clear		Exit
	Title		List
	TV / DVD		TV/R
	Power TV		Shift + Power
	PR/CH+ TV		Shift + Ch +
	PR/CH- TV		Shift + Ch -
	Vol+ TV		Vol +
	Vol- TV		Vol -
	AV/Input TV		Shift + AV

Original	Replacement

