


 

 





Original	Replacement
 Power	 Power
 TV System	 Menu
 Display	 Info
 Audio	 Dual
 Subtitle	 Subt
 Recall	 Pre Ch
 A-B	 Shift + Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Text	 Text
 Timeshift	 Format
 Rec	 Rec
 Sel Favor / Vol +	 Vol +
 Load Favor / Vol -	 Vol -
 Source	 AV
 Edit	 3D
 EPG	 Guide
 TV / MHR	 Shift + TV/R
 DTV	 TV/R
 Up / CH +	 Up
 Up / CH +	 Ch +
 Down / CH -	 Down
 Down / CH -	 Ch -
 Left	 Left
 Enter	 Ok
 Right	 Right





Original	Replacement	Original	Replacement
 Back	 Back	 Timer Rec	 Shift + AV
 Home	 Smart	 Zoom	 Eject
 Goto	 List	 HDD	 Media
 Play	 Play	 USB	 Shift + Media
 Stop	 Stop	 LAN	 Options
 Pause	 Pause		
 Skip ←	 Shift + Left		
 Skip →	 Shift + Right		
 Red / <<<	 Red		
 Red / <<<	 <<<		
 Green / >>>	 Green		
 Green / >>>	 >>>		
 Yellow / I<<<	 Yellow		
 Yellow / I<<<	 I<<<		
 Blue / >>>I	 Blue		
 Blue / >>>I	 >>>I		
 Mute	 Mute		

