

 




 















 

 




 







| Original | Replacement |
|--|---|
|  Standby - On |  Power |
|  Display |  Info |
|  Input Select |  AV |
|  Sleep |  Sleep |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Setup |  Options |
|  Sound Select |  Dual |
|  Back |  Back |

| Original | Replacement |
|--|--|
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |
|  Right |  Right |
|  Down |  Down |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Mute |  Mute |
|  Prog + |  Ch + |
|  Prog - |  Ch - |
|  Prog Return |  Pre Ch |
|  Red |  Red |
|  Green |  Green |
|  Yellow |  Yellow |
|  Cyan |  Blue |
|  Color System |  Smart |
|  Reveal |  TV/R |



