








 













 





















 



 




























 

 















Original	Replacement
 Power	 Power
 3D	 Shift + 3
 Menu	 Menu / Home
 Input TV	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Aspect	 Picture / Format
 Guide	 Guide / EPG / -/--
 Direct TV Rec	 Shift + Rec / Rec Mode
 Viera Link	 Display / Media
 Viera Tools	 D.Menu / Top
 Internet	 Smart / List
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Down	 Down
 Option	 Setup / OPT /
 Back / Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [≡□]	 Shift + Stop /
 [≡◊] STTL	 Subtitle / EQ
 [≡]	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Vol +	 Vol+
 Recall	 Fav / Marker / PC
 Vol -	 Vol-
 CH +	 CH+ / Page+
 CH -	 CH- / Page-
 Rec	 Rec / Rec Mode
 Power ▼	 Shift + Power
 I<<	 I<< / Preset-
 CH - ▼	 Shift + CH- /
 CH + ▼	 Shift + CH+ /
<< button" data-bbox="228 891 261 924"/> <<	 << / Tune-
 Play	 Play / Slow

Original	Replacement
 >>	 >> / Preset+
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause / Step	 Pause / Step / Freeze





	Original	Replacement	Original	Replacement
	Power	Power		
	Rec	Rec / Rec Mode		
	CH +	CH+ / Page+		
	CH -	CH- / Page-		
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Play	Play / Slow		
	Stop	Stop / Hold		
	Pause/Step	Pause / Step / Freeze		

