



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TV / R		TV/Radio /
	Menu		Menu / Home
	Sortie		Exit / Cancel / Clear
	Up		Up

Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol +		Vol+
	Info		Info / Angle
	CH +		CH+ / Page+
	Vol -		Vol-
	Audio		Audio / Lang I/II
	CH -		CH- / Page-
	Red / RCL		Red / Netflix / Search
	Green / Pause		Shift + Green / APP /
	Green / Pause		Green / APP / Repeat
	Yellow / Sous		Yellow / YouTube / Repeat
	Yellow / Sous		Shift + Yellow / YouTube /
	Blue / Text		Shift + Blue / Prime
	Blue / Text		Blue / Prime Video / Random





Original	Replacement	Original	Replacement
FAV	Fav / Marker / PC		
SAT	+ Shift + 0		
V.F	Setup / OPT /		
Pause	Pause / Step / Freeze		
<	+ Shift + << /		
>	+ Shift + >> /		
Rec	Rec / Rec Mode		
Play	Play / Slow		
<<	<< / Tune-		
>>	>> / Tune+		
Stop	Stop / Hold		

Original	Replacement	Original	Replacement

